

SUPREME


WALL GUARD



Product
Information.

Product Information

- Shield restroom walls from excess moisture blown off wet hands by high-speed hand dryers.
- Protects walls from splashed water, keeping them clean, dry, and mould-free.
- Helps prevent mildew, mould, and bacterial growth.
- Secure fit under hand dryers, easy to install with 3M adhesive strips (included).
- No drilling required – mounts directly below hand dryers.
- Designed for easy wipe-down, aiding maintenance and preserving cleanliness.
- Ideal for maintaining the appearance and hygiene of commercial washrooms

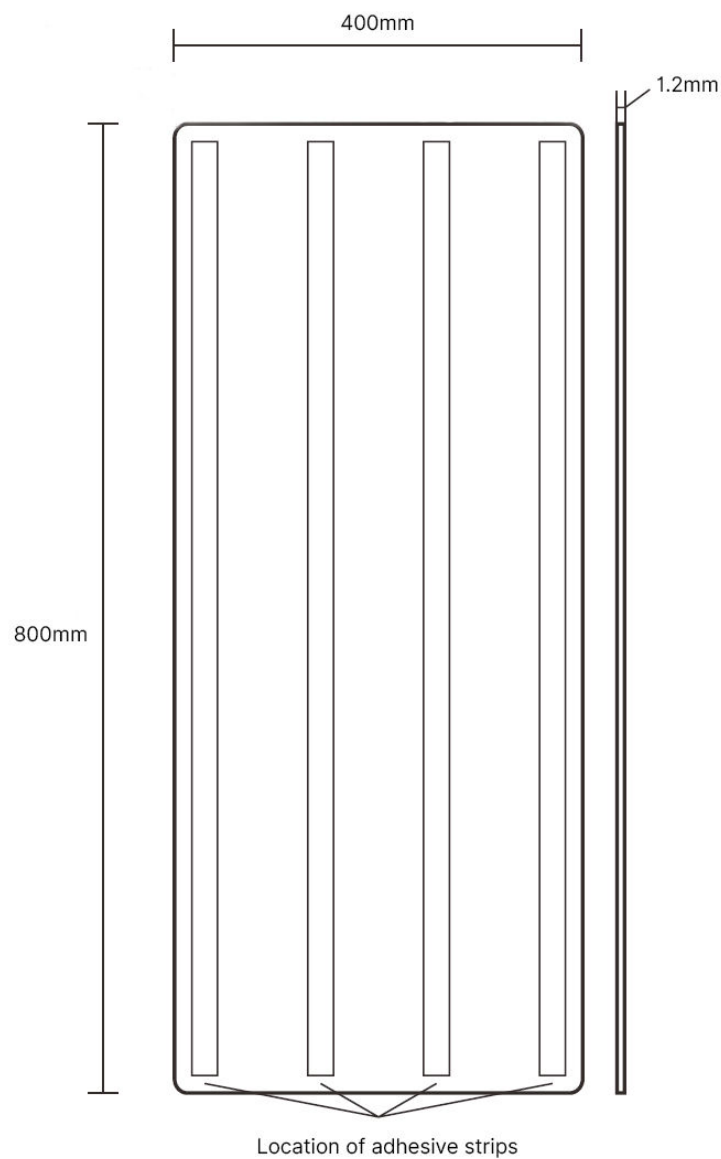

Specifications

Material	Stainless steel 304 or black powder coated
Weight	3.6 kg
Mounting	4 strips of construction-grade 3M adhesive tape (included)
Dimensions	800L x 400W x 1.2D mm
Warranty	12 months against manufacture defects
Product Codes	WG812 (White) WG813 (Brushed Stainless Steel)

Installation Information

1. Clean the wall surface with isopropyl alcohol before installation. Ensure the surface is dry and free from dust and debris.
2. Centre the Wall Guard beneath the hand dryer, position the top of the Wall Guard approx 25mm below the bottom of the dryer.
3. Carefully measure and mark the wall surface for the placement of the Wall Guard.
4. Four strips of double-sided adhesive are included for each panel.
Apply the adhesive strips to the textured side of black panel, or the smooth side of brushed stainless steel panels as follows:
 - a. Lay out the adhesive strips as per the diagram.
 - b. Remove one strip and apply it to either the right or left side to begin.
 - c. Press each strip firmly onto the Wall Guard as applied.
 - d. Continue until all four strips are securely in place.
5. Align the top edge of the Wall Guard with your markings and press it firmly against the wall across the entire surface.
6. Optional: After applying the Wall Guard, you may add silicone sealant around the edges.

Note: Alignment is crucial. Once applied, the Wall Guard cannot be repositioned.

Cleaning Instructions

Clean the installed Wall Guard with mild soapy water and a soft cloth. A spray bottle with a mild dish soap solution works well.

Do not use cleaners containing ammonia or abrasive materials.

SPL

splwashrooms.co.nz
+647 823 5790